

RELOCATING THE ROLLER (LOADING/UNLOADING)



Moving a roller between worksites is normally done on a float.

Any transport must comply with:

- Codes of practice.
- Traffic management requirements.
- Site regulations.
- Traffic codes and road rules.

Mobile plant and equipment can only be loaded/unloaded by:

- A person who currently holds the competency for RIIHAN308F (or its equivalent), or
- A person who is being directly assisted by someone who currently holds the competency for RIIHAN308F (or its equivalent).

Be careful when loading the roller onto the transport and use a spotter to help guide the roller up and down the ramps.

Once on board the roller must be securely locked down to prevent any movement.

If a roller is being moved across a public road ensure that all traffic rules are obeyed.